




Stuart Steel Protection Corporation, Box 476, South Bound Brook, NJ 08880 • Telephone (732) 469-5544 • FAX (732) 469-9270  
Website: www.stusteel.com E-mail: sspcmail@worldnet.att.net

### INSTRUCTIONS: "TYPE-S" SPLICING KIT

- 1) CUT BACK CABLE INSULATION AND CONNECT CABLE BY STANDARD DESIRED METHOD OR USE OPTIONAL HARDWARE IF PROVIDED WITH THIS PACKAGE.
- 2) VIGOROUSLY SAND CABLE INSULATION APPROXIMATELY TWO INCHES BACK FROM THE CONNECTION.
- 3) IF RE-ENTRY MAY BE REQUIRED, TAPE THE CONNECTION FIRST WITH ONE LAYER OF VINYL TAPE.
- 4) ENFOLD THE CONNECTION USING THE SQUARE MASTIC SPLICING PATCH, KNEADING THE MASTIC SEALANT SO THAT IT COVERS THE ENTIRE SPLICE AND BONDS COMPLETELY TO ITSELF.

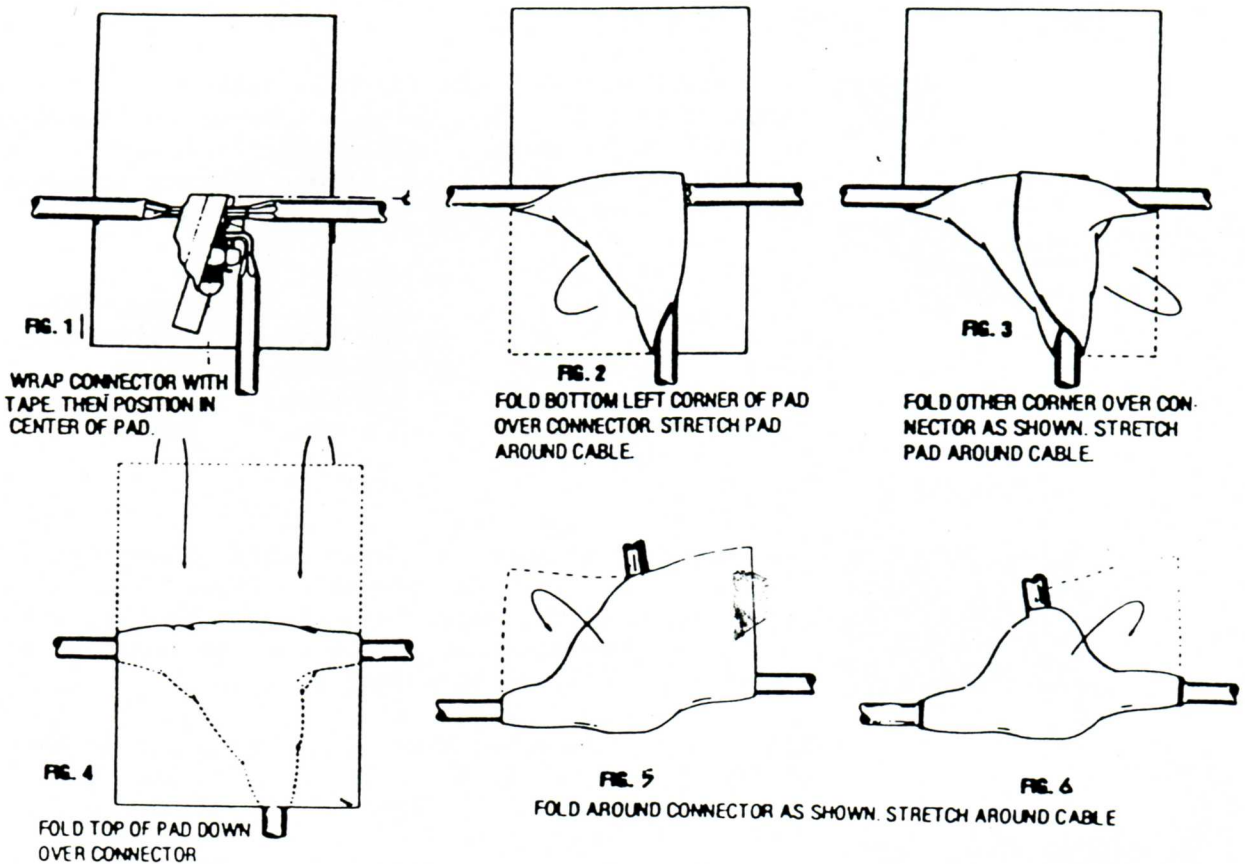

- 5) COVER THE SPLICE PATCH MASTIC MATERIAL WITH ONE LAYER OF RUBBER TAPE.
- 6) COVER RUBBER TAPE WITH TWO LAYERS OF VINYL TAPE. UNDERGROUND SPLICE IS COMPLETE.
- 7) FOR UNDERWATER INTEGRITY, A COATING OF "SKOTCHKOTE" OR EQUAL ELECTRICAL SEALER, IS RECOMMENDED.

